


MIRY V mm

2.100

3.400

5.500



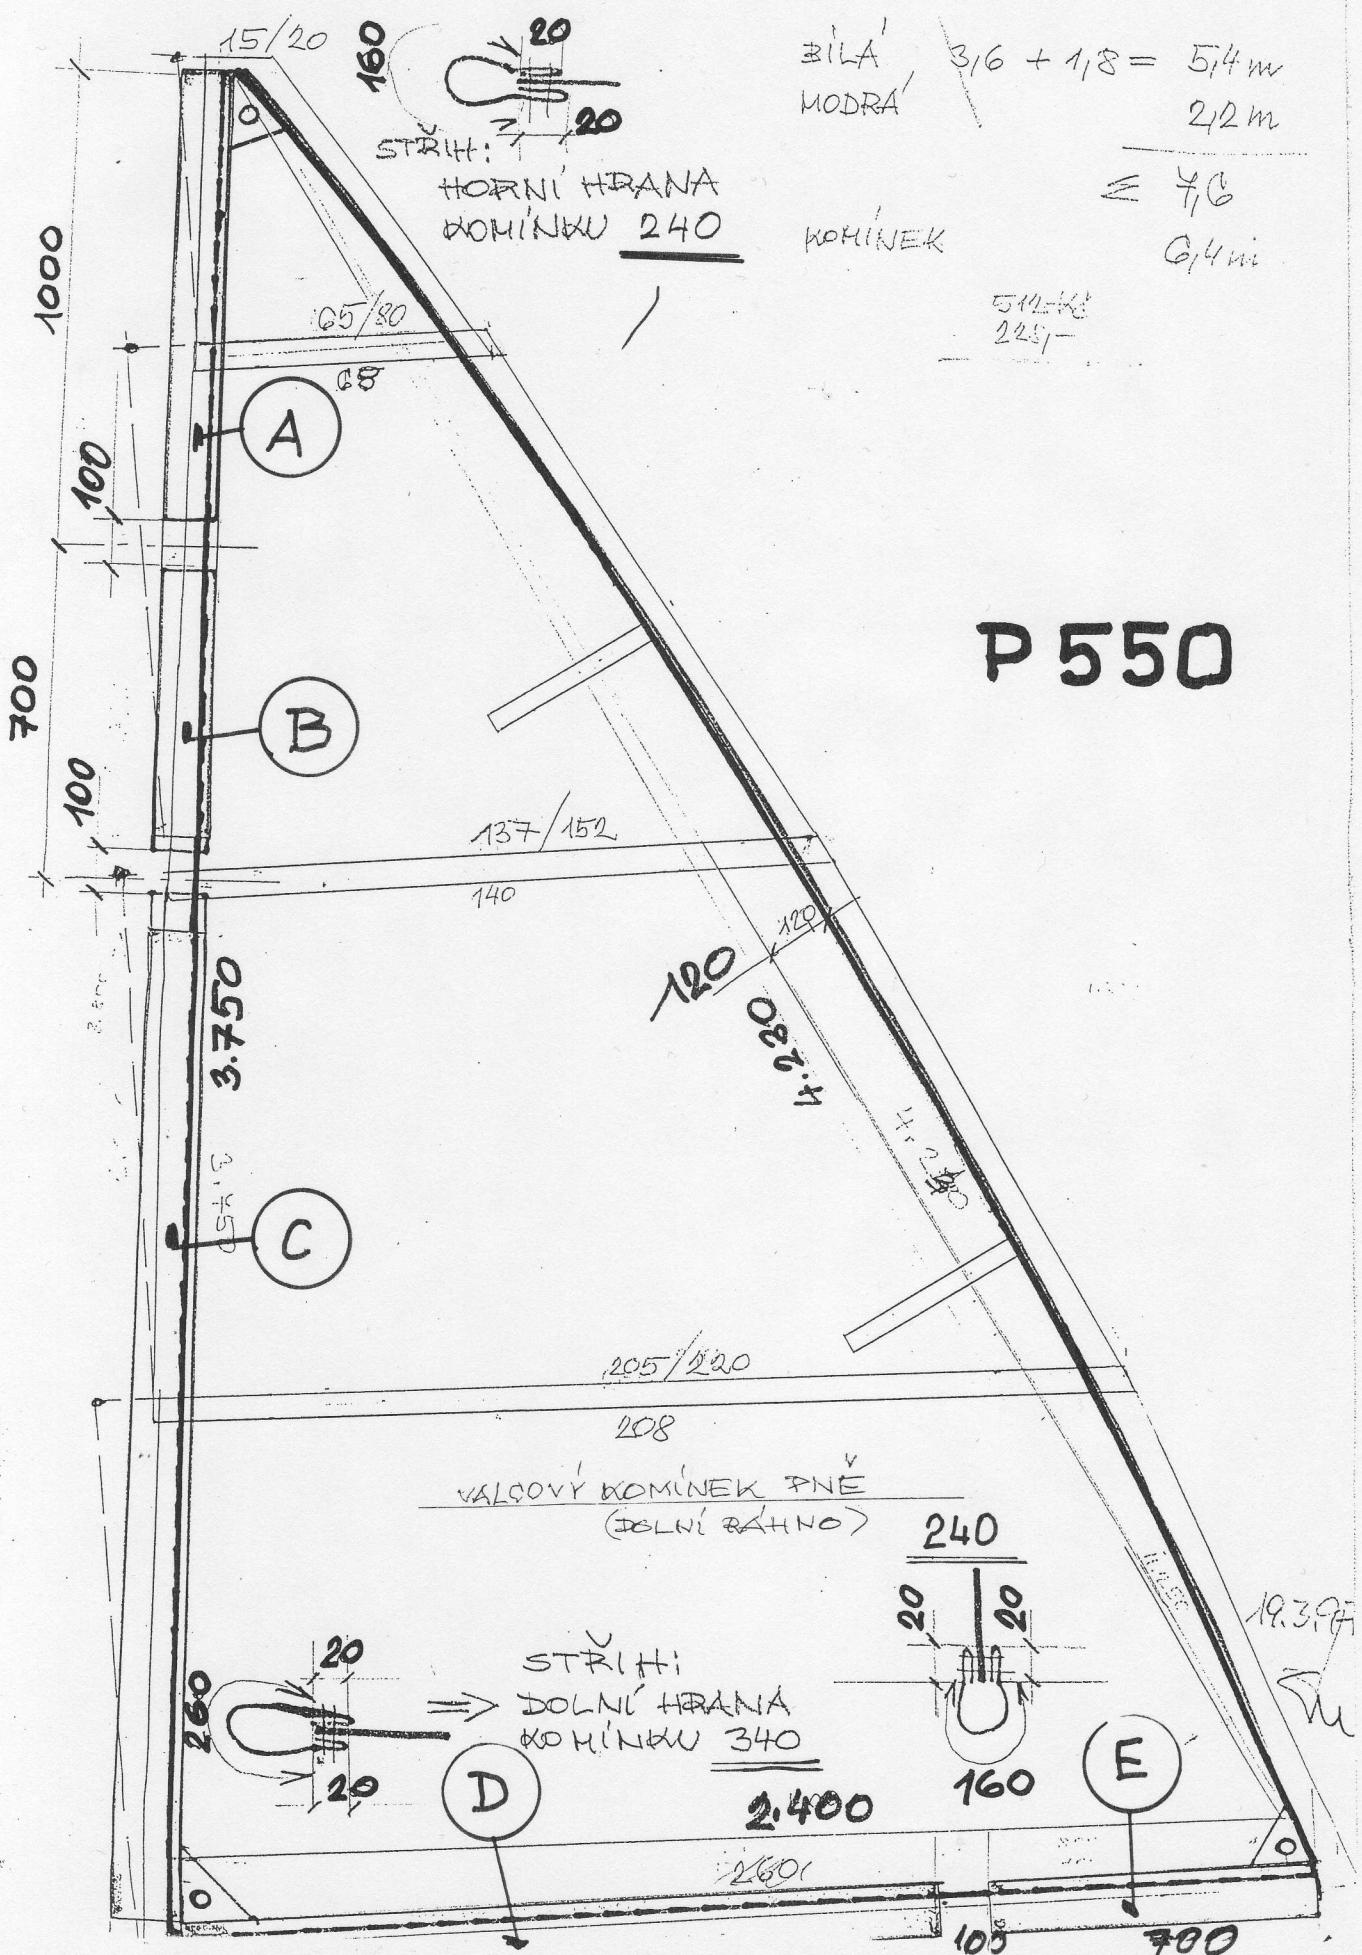

UMÍSTĚNÍ SVORNÍKŮ STĚNU
A UPÍNACÍK NA STĚNU

374


204

100

70

KOMÍNKY:

C

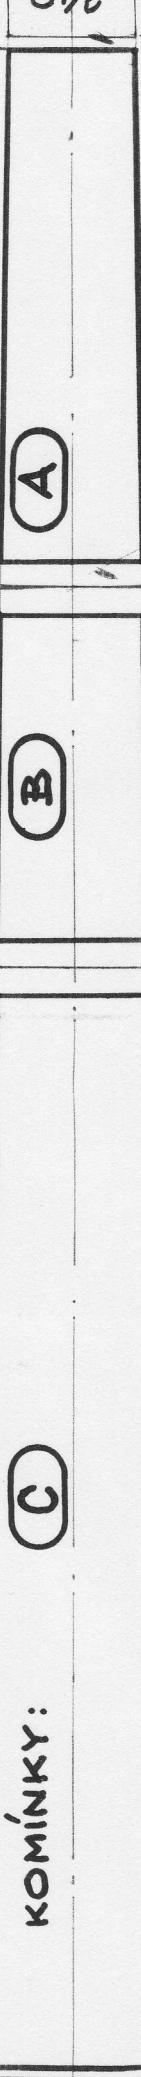

199

200

5

95

105

10

70

60

10

PRELOŽIT A ZALEPIT
CHÉMOPRÉNEM

384

340

5